



QUARTZ

**CLEAR-CUT DESIGN FOR PRECISION PERFORMANCE**

# CHAIR ADJUSTMENTS



## SEAT -BACKREST TILT 5 POSITIONS

Turn the grey ring forwards to release the tilt movement. Turn the knob backwards-forwards to set the spring tension. Turn the grey ring backwards to lock the inclination.

## SEAT ANGLE FORWARDS ADJUSTMENT 3 POSITIONS

Turn the back lever to adjust the seat angle up to 0° - 2.5° - 5°.

## SEAT HEIGHT ADJUSTMENT

To raise: take your weight off the seat, pull the mechanism lever upwards, release the lever when the seat is at the desired height.

To lower: place your weight on the seat, pull the mechanism lever upwards, release the lever when the seat is at the desired height.

## HEADREST ADJUSTMENT

Pull upwards / push downwards the headrest to set the desired height. Push forwards / pull backwards the headrest to set the desired inclination

## BACKREST HEIGHT ADJUSTMENT 8 POSITIONS

To raise the backrest height: pull backrest up; it will auto-lock at the different heights.  
To lower the backrest height: raise backrest to full height, then lower to the lowest position and follow the above process to reach the desired height.

## ARMS HEIGHT ADJUSTMENT 10 POSITIONS

Press and hold the button and adjust the arm to desired height. Release button to lock.

## SEAT DEPTH ADJUSTMENT 6 POSITIONS

While holding the backrest with your left hand press and hold the button with your right hand and move the seat to desired position using your torso. Release button to lock in desired position.

# MECHANISMS AND FUNCTIONS

## SM3622115 SYNCHRON WITH SEAT ANGLE ADJUSTMENT RAPID OR SCREW ASSEMBLY



### FUNCTIONS

1. Turn the lever to adjust the seat height
2. Turn the knob to adjust the tilting intensity
3. Turn the ring to lock/unlock the backrest tilt
4. Turn the lever to adjust the seat angle

### MECHANISM DETAILS

#### BACKREST


- Tilt: 20°
- Automatic stop search
- 5 locking positions
- Safety antishock system

#### SEAT

- Tilt: 9°
- Work position: 0°
- Forward adjustment : 0°, 2.5°, 5°

#### SPRING ADJUSTMENTS

- Lateral
- Easy with 1/4 turn rotation
- Wide intensity setting

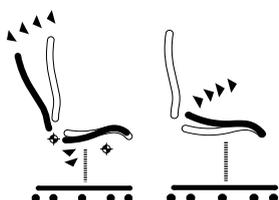

## SM3622015 SYNCHRON RAPID OR SCREW ASSEMBLY



### FUNCTIONS

1. Turn the lever to adjust the seat height
2. Turn the knob to adjust the tilting intensity
3. Turn the ring to lock/unlock the backrest tilt

### MECHANISM DETAILS

#### BACKREST


- Tilt: 20°
- Automatic stop search
- 5 locking positions
- Safety antishock system

#### SEAT

- Tilt: 9°
- Work position: 0°

#### SPRING ADJUSTMENTS

- Lateral
- Easy with 1/4 turn rotation
- Wide intensity setting

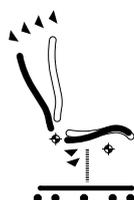

## SM3202115 AUTOMATIC SYNCHRON RAPID OR SCREW ASSEMBLY



### FUNCTIONS

1. Turn the lever to adjust the seat height
2. Push the button to lock/unlock the backrest tilt

### MECHANISM DETAILS

#### BACKREST

- Tilt: 20°
- Automatic stop search
- 5 locking position using a button
- Safety antishock system

#### SEAT

- Tilt: 6°
- Work position: 0°

#### SPRING ADJUSTMENTS

- Weight-sensitive synchron



# OTHER COMPONENTS

## SF3215315

Black gas column h.215 mm  
90 mm tapered.



## SB2316615 Pyramid base

Five star base  $\varnothing$  650 mm  
Nylon + 30% glass fiber.



## RT9002015

**Hard castors**  
castor  $\varnothing$  50 mm  
hub  $\varnothing$  39 mm  
stem 11x20 mm

## RT9006015

**Self-braking hard castors**  
castor  $\varnothing$  50 mm  
hub  $\varnothing$  39 mm  
stem 11x20 mm



## RT9008015

**Soft castors**  
castor  $\varnothing$  50 mm  
hub  $\varnothing$  39 mm  
stem 11x20 mm

## RT9009015

**Self-braking soft castors**  
castor  $\varnothing$  50 mm  
hub  $\varnothing$  39 mm  
stem 11x20 mm

## SE3022015

Black telescopic  
column cover.



## SF3215915

Black gas column  
h.215 mm, 20 mm  
tapered.



## SB1056615 Flat base

Five star base  $\varnothing$  650 mm  
Nylon + 30% glass fiber.



## RT9002015

**Hard castors**  
castor  $\varnothing$  50 mm  
hub  $\varnothing$  39 mm  
stem 11x20 mm

## RT9006015

**Self-braking hard castors**  
castor  $\varnothing$  50 mm  
hub  $\varnothing$  39 mm  
stem 11x20 mm



## RT9008015

**Soft castors**  
castor  $\varnothing$  50 mm  
hub  $\varnothing$  39 mm  
stem 11x20 mm

## RT9009015

**Self-braking soft castors**  
castor  $\varnothing$  50 mm  
hub  $\varnothing$  39 mm  
stem 11x20 mm

## SF3180402

Chrome gas column h.180 mm.



## SB1016611 Aluminium base

Five star base  $\varnothing$  680 mm  
Die-cast polished aluminium



## RP9002015

**Hard castors**  
castor  $\varnothing$  50 mm  
hub  $\varnothing$  16 mm  
stem 11x20 mm

## RP9006015

**Self-braking hard castors**  
castor  $\varnothing$  50 mm  
hub  $\varnothing$  16 mm  
stem 11x20 mm



## RP9008015

**Soft castors**  
castor  $\varnothing$  50 mm  
hub  $\varnothing$  16 mm  
stem 11x20 mm

## RP9009015

**Self-braking soft castors**  
castor  $\varnothing$  50 mm  
hub  $\varnothing$  16 mm  
stem 11x20 mm



## RP9008007

**Soft castors chrome cover**  
castor  $\varnothing$  50 mm  
hub  $\varnothing$  16 mm

## RP9009007


**Self-braking soft castors -  
chrome cover**  
castor  $\varnothing$  50 mm  
hub  $\varnothing$  16 mm  
stem 11x20 mm

# DIMENSIONS

## WITH NYLON BASE



## WITH ALUMINIUM BASE

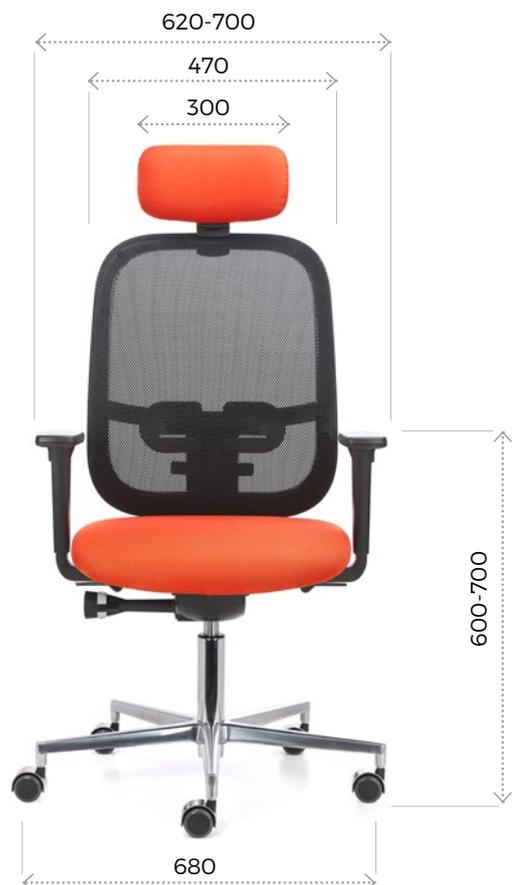



This catalogue replaces and invalidates all previous editions. The reproduction, even partial, of this catalogue is prohibited unless previously authorised in writing by Diwar Srl. Diwar Srl reserves the right to modify this catalogue and/or the products it contains, in order to make improvements or in any case for any technical and/or commercial reason it considers useful, without prior notice.

All rights reserved.

graphic design & photos by Ninety9.it



uniZ  
design for you

Ved Lunden 7  
DK-8230 Åbyhøj  
Denmark  
Phone: +45 8675 1515  
Fax: +45 8675 1519  
Cell: +45 2448 8627  
Mail: info@uni-z.dk  
www.uni-z.dk  
CVR: 27122752



**Diwar**