



Diwar

BUTTERFLY LIGHT

SHAPED AROUND YOU

CHAIR ADJUSTMENTS



SEAT AND BACKREST TILT 5 POSITIONS

Push the mechanism button to release the tilt movement. Push your back to the chair backrest till the desired position and push-in the button to lock the inclination.

SEAT HEIGHT ADJUSTMENT

To raise: take your weight off the seat, pull the mechanism lever upwards, release the lever when the seat is at the desired height.

To lower: place your weight on the seat, pull the mechanism lever upwards, release the lever when the seat is at the desired height.

HEADREST ADJUSTMENT

Pull upwards / push downwards the headrest to set the desired height. Push forwards / pull backwards the headrest to set the desired inclination

BACKREST HEIGHT ADJUSTMENT 8 POSITIONS

To raise the backrest height: pull backrest up; it will auto-lock at the different heights.

To lower the backrest height: raise backrest to full height, then lower to the lowest position and follow the above process to reach the desired height.

ARMS HEIGHT ADJUSTMENT 10 POSITIONS

Press and hold the button and adjust the arm to desired height. Release button to lock.

SEAT DEPTH ADJUSTMENT 6 POSITIONS

While holding the backrest with your left hand press and hold the button with your right hand and move the seat to desired position using your torso. Release button to lock in desired position.

MECHANISMS AND FUNCTIONS

SM3622015
SYNCHRON
 RAPID OR SCREW ASSEMBLY



FUNCTIONS

1. Turn the lever to adjust the seat height
2. Turn the knob to adjust the tilting intensity
3. Turn the ring to lock/unlock the backrest tilt

MECHANISM DETAILS

BACKREST


- Tilt: 20°
- Automatic stop search
- 5 locking positions
- Safety antishock system

SEAT

- Tilt: 9°
- Work position: 0°

SPRING ADJUSTMENTS

- Lateral
- Easy with 1/4 turn rotation
- Wide intensity setting

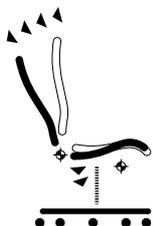

SM3202115
AUTOMATIC SYNCHRON
 RAPID OR SCREW ASSEMBLY



FUNCTIONS

1. Turn the lever to adjust the seat height
2. Push the button to lock/unlock the backrest tilt

MECHANISM DETAILS

BACKREST

- Tilt: 20°
- Automatic stop search
- 5 locking position using a button
- Safety antishock system

SEAT


- Tilt: 6°
- Work position: 0°

SPRING ADJUSTMENTS

- Weight-sensitive synchron



SM3202015
AUTOMATIC SYNCHRON
 SCREW ASSEMBLY

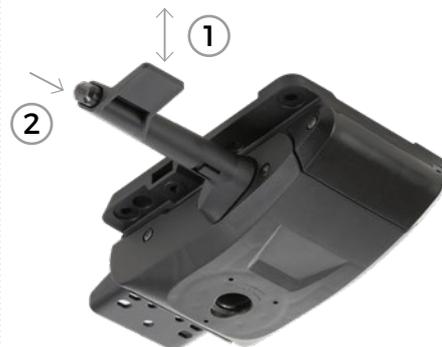

FUNCTIONS

1. Turn the lever to adjust the seat height
2. Push the button to lock/unlock the backrest tilt

MECHANISM DETAILS

BACKREST

- Tilt: 20°
- Automatic stop search
- 5 locking position using a button
- Safety antishock system

SEAT

- Tilt: 6°
- Work position: 0°

SPRING ADJUSTMENTS

- Weight-sensitive synchron



OTHER COMPONENTS

SF3215315

Black gas column h.215 mm 90 mm tapered.



SE3022015

Black telescopic column cover.



SF3215915

Black gas column h.215 mm, 20 mm tapered.



SF3180402

Chrome gas column h.180 mm.



SB2316615 Pyramid base

Five star base \varnothing 650 mm
Nylon + 30% glass fiber.



SB1056615 Flat base

Five star base \varnothing 650 mm
Nylon + 30% glass fiber.



SB1016611 Aluminium base

Five star base \varnothing 680 mm
Die-cast polished aluminium



RT9002015

Hard castors
castor \varnothing 50 mm
hub \varnothing 39 mm
stem 11x20 mm



RT9002015

Hard castors
castor \varnothing 50 mm
hub \varnothing 39 mm
stem 11x20 mm



RP9002015

Hard castors
castor \varnothing 50 mm
hub \varnothing 16 mm
stem 11x20 mm

RT9006015

Self-braking hard castors
castor \varnothing 50 mm
hub \varnothing 39 mm
stem 11x20 mm

RT9006015

Self-braking hard castors
castor \varnothing 50 mm
hub \varnothing 39 mm
stem 11x20 mm

RP9006015

Self-braking hard castors
castor \varnothing 50 mm
hub \varnothing 16 mm
stem 11x20 mm



RT9008015

Soft castors
castor \varnothing 50 mm
hub \varnothing 39 mm
stem 11x20 mm



RT9008015

Soft castors
castor \varnothing 50 mm
hub \varnothing 39 mm
stem 11x20 mm



RP9008015

Soft castors
castor \varnothing 50 mm
hub \varnothing 16 mm
stem 11x20 mm

RT9009015

Self-braking soft castors
castor \varnothing 50 mm
hub \varnothing 39 mm
stem 11x20 mm

RT9009015

Self-braking soft castors
castor \varnothing 50 mm
hub \varnothing 39 mm
stem 11x20 mm

RP9009015

Self-braking soft castors
castor \varnothing 50 mm
hub \varnothing 16 mm
stem 11x20 mm



RP9008007

Soft castors chrome cover
castor \varnothing 50 mm
hub \varnothing 16 mm

RP9009007

Self-braking soft castors - chrome cover
castor \varnothing 50 mm
hub \varnothing 16 mm
stem 11x20 mm

DIMENSIONS

WITH NYLON BASE



WITH ALUMINIUM BASE





This catalogue replaces and invalidates all previous editions. The reproduction, even partial, of this catalogue is prohibited unless previously authorised in writing by Diwar Srl. Diwar Srl reserves the right to modify this catalogue and/or the products it contains, in order to make improvements or in any case for any technical and/or commercial reason it considers useful, without prior notice.

All rights reserved.

uniZ
design for you

Ved Lunden 7
DK-8230 Åbyhøj
Denmark
Phone: +45 8675 1515
Fax: +45 8675 1519
Cell: +45 2448 8627
Mail: info@uni-z.dk
www.uni-z.dk
CVR: 27122752

